


Assembly instructions for the aluminum rail for securing the load in trailers with sandwich walls

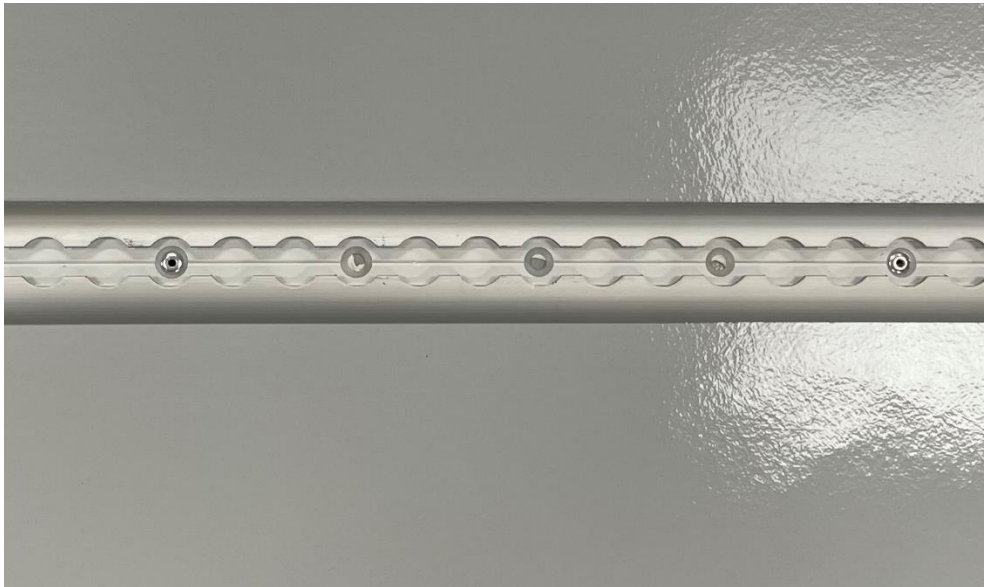

To the installation you need:

- microfiber cloth



- Isopropyl Alcohol or ethyl acetate



- universal glue e.g. Mamut or Auto Weld CX-80



- drill



- 5mm drill bit



- riveter




STEP 1



STEP 2



CORRECT

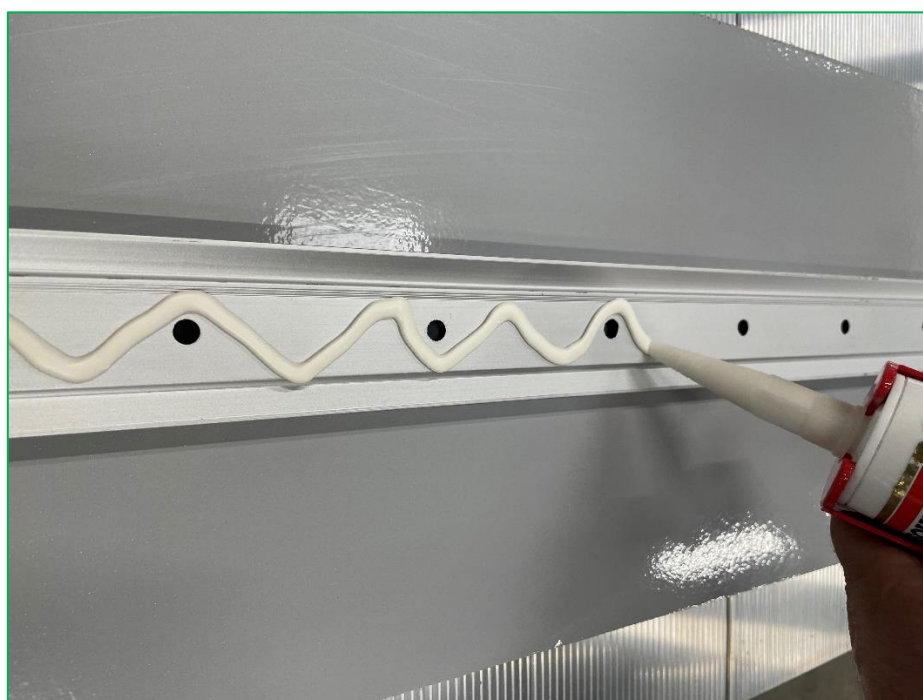





STEP 3




CORRECT

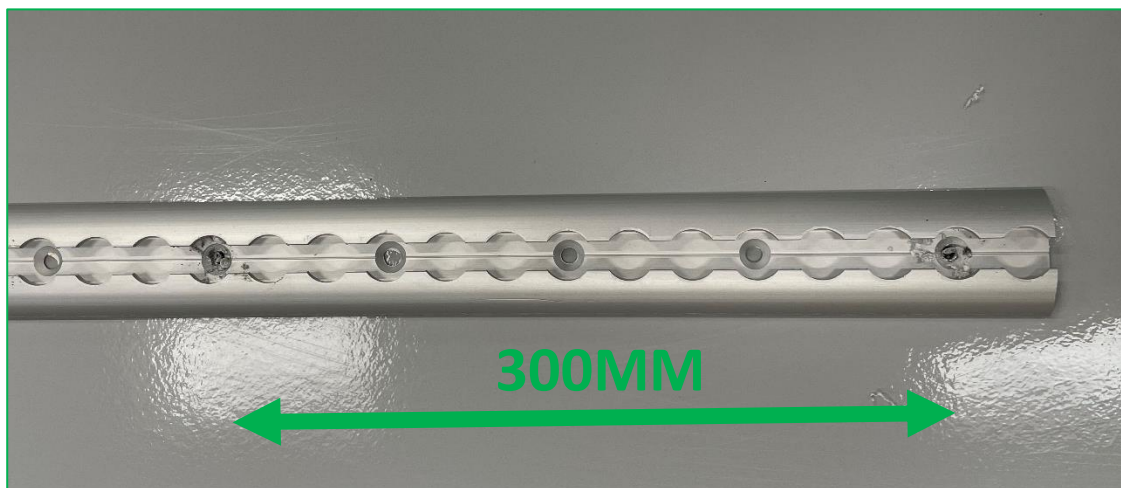

STEP 4

| NUMBER | PICTURE | PCS/M |
|--------|---|-------|
| 1 |  | 3-4 |

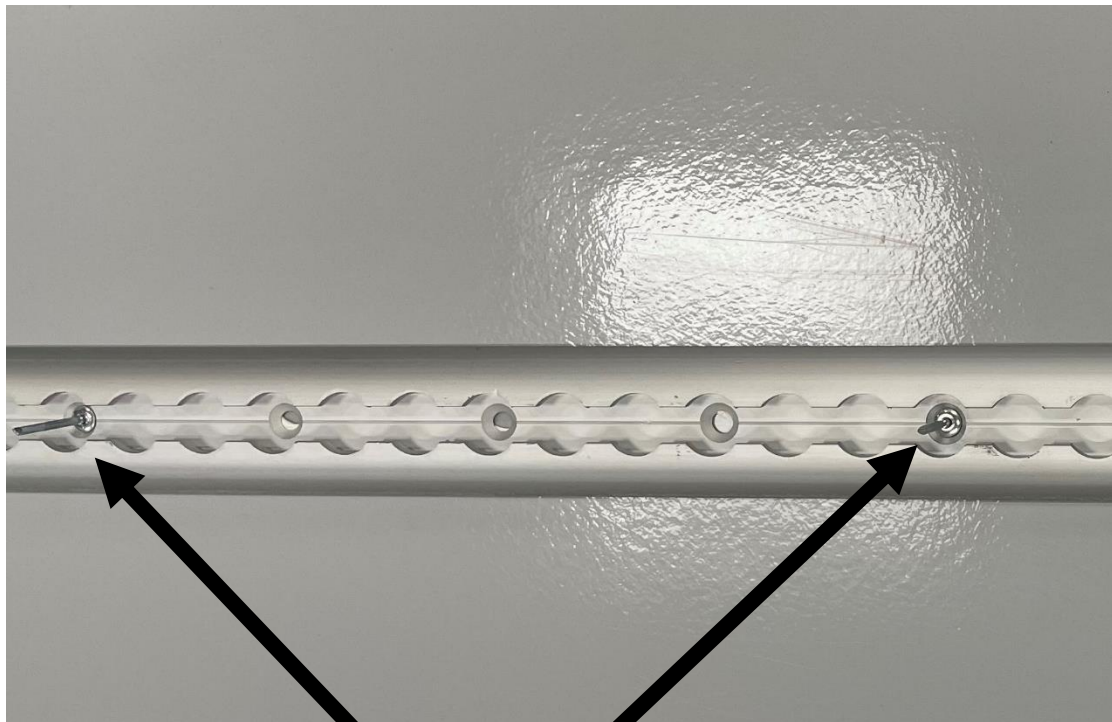

1



1 WEEK

CORRECT

